HOME
DECORATORS
COLLECTION

BF-24889 MSL BOOKCASE 21"W× 15"D× 50"H

INV#10357

ASSEMBLY INSTRUCTIONS

Made In China

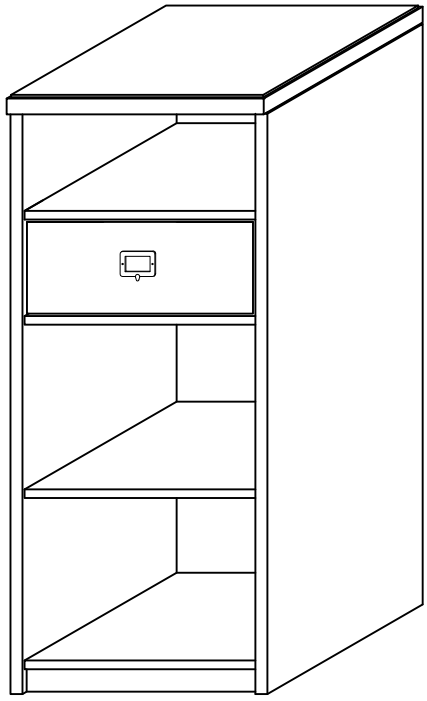

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Custormer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A  TOP PANEL-1PC	B  LEFT SIDE PANEL-1PC	C RIGHT SIDE PANEL-1PC
D  ACROSS PANEL-1PC	E  BOTTOM PANEL-1PC	F  DOWN ADORNING PANEL-1PC
G  BACK PANEL-1PC	H 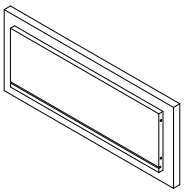 DRAWER PANEL FRONT-1PC	I  LEFT DRAWER PANEL SIDE-1PC
J  RIGHT DRAWER PANEL SIDE-1PC	K 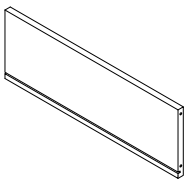 DRAWER PANEL BACK-1PC	L 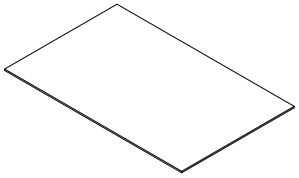 DRAWER PANEL BOTTOM-1PC

M  SMALL ACROSS PANEL-1PC	N  SHELF-1PC	O CAM-TOOL-1PC
P 6mm× 1"  SCREWS-8PCS	Q  DOWELS-4PCS	R 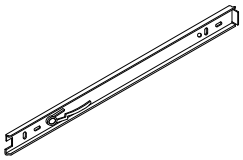 INNER SLIDES-2PCS
S 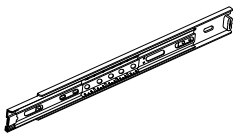 OUTER SLIDES-2PCS	T 6mm× 3/8" SCREWS-10PCS	U 7mm× 5/8"  SCREWS-26PCS
V 4mm× 3/8" SCREWS-4PCS	W  HANDLE-1PC	X  CAM-BOLTS-16PCS

Y CAM-LOCKS-16PCS	Z  SHELF SUPPORTS-4PCS	A1 CAM-LOCK CAPS-4PCS	B1 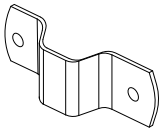 HOOKS-4PCS
C1 PLASTIC BELTS-2PCS	D1  GECKOS-4PCS	E1 6mm× 3/4"  SCREWS-4PCS	F1 7mm× 7/8"  SCREWS-4PCS

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

HOW TO SEPARATE GLIDES

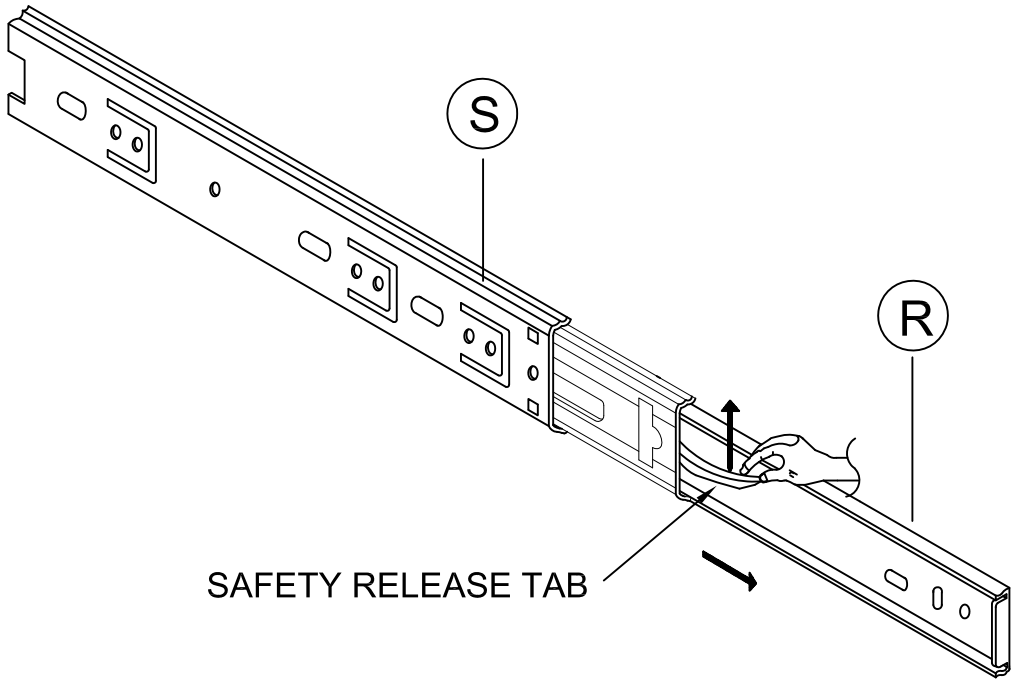

PRIOR TO ASSEMBLY, WE SUGGEST SEPARATING THE INNER GLIDES FROM THE OUTER GLIDES, SIMPLY PULL THE LEFT / RIGHT INNER GLIDES FROM THE OUTER GLIDES EXPOSING A SMALL BLACK SAFELY RELEASE TAB, BY PUSHING THE SAFETY RELEASE TAB. YOU WILL BE ABLE TO SEPARATE THE GLIDES.

NOTE: • UPON OPENING, THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

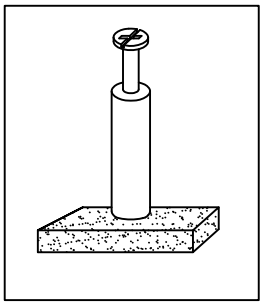

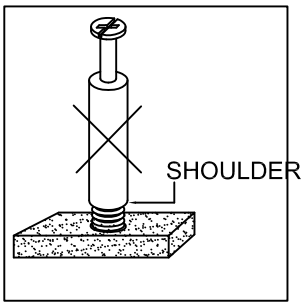

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

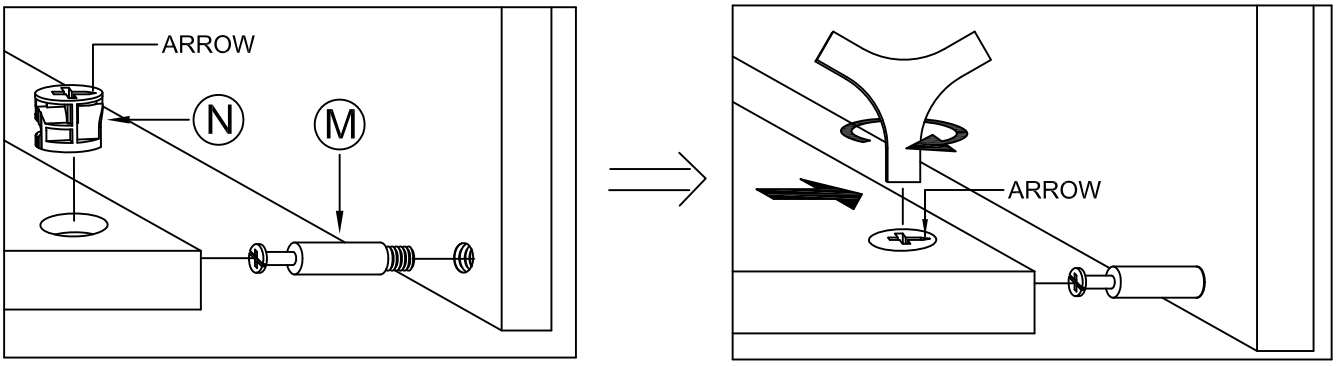

NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

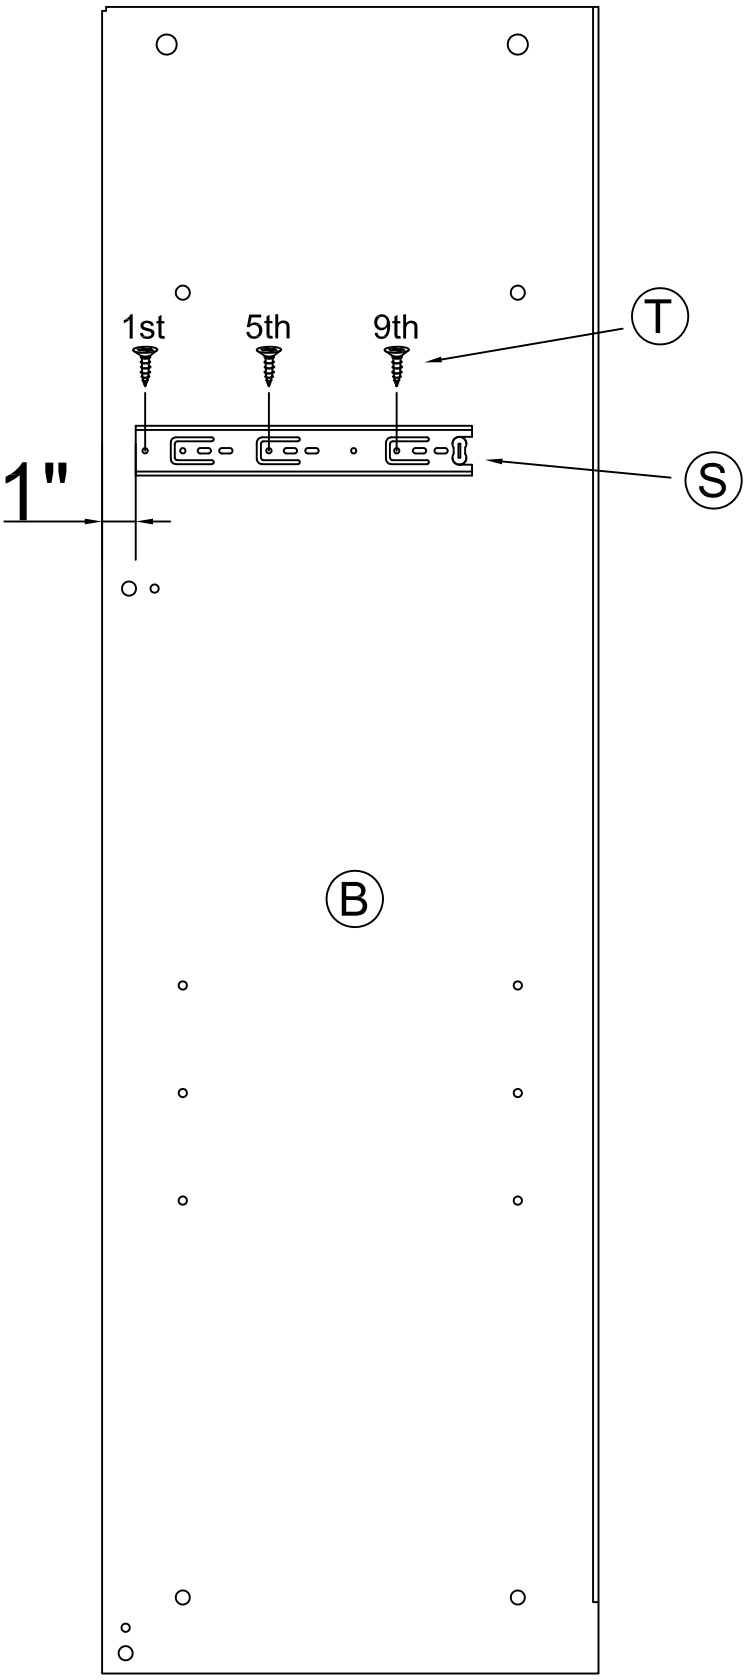

1). ASSEMBLE THE OUTER SLIDE(S).

- ATTACH THE OUTER SLIDE(S) TO LEFT SIDE PANEL(B) USING 3 SCREWS(T).

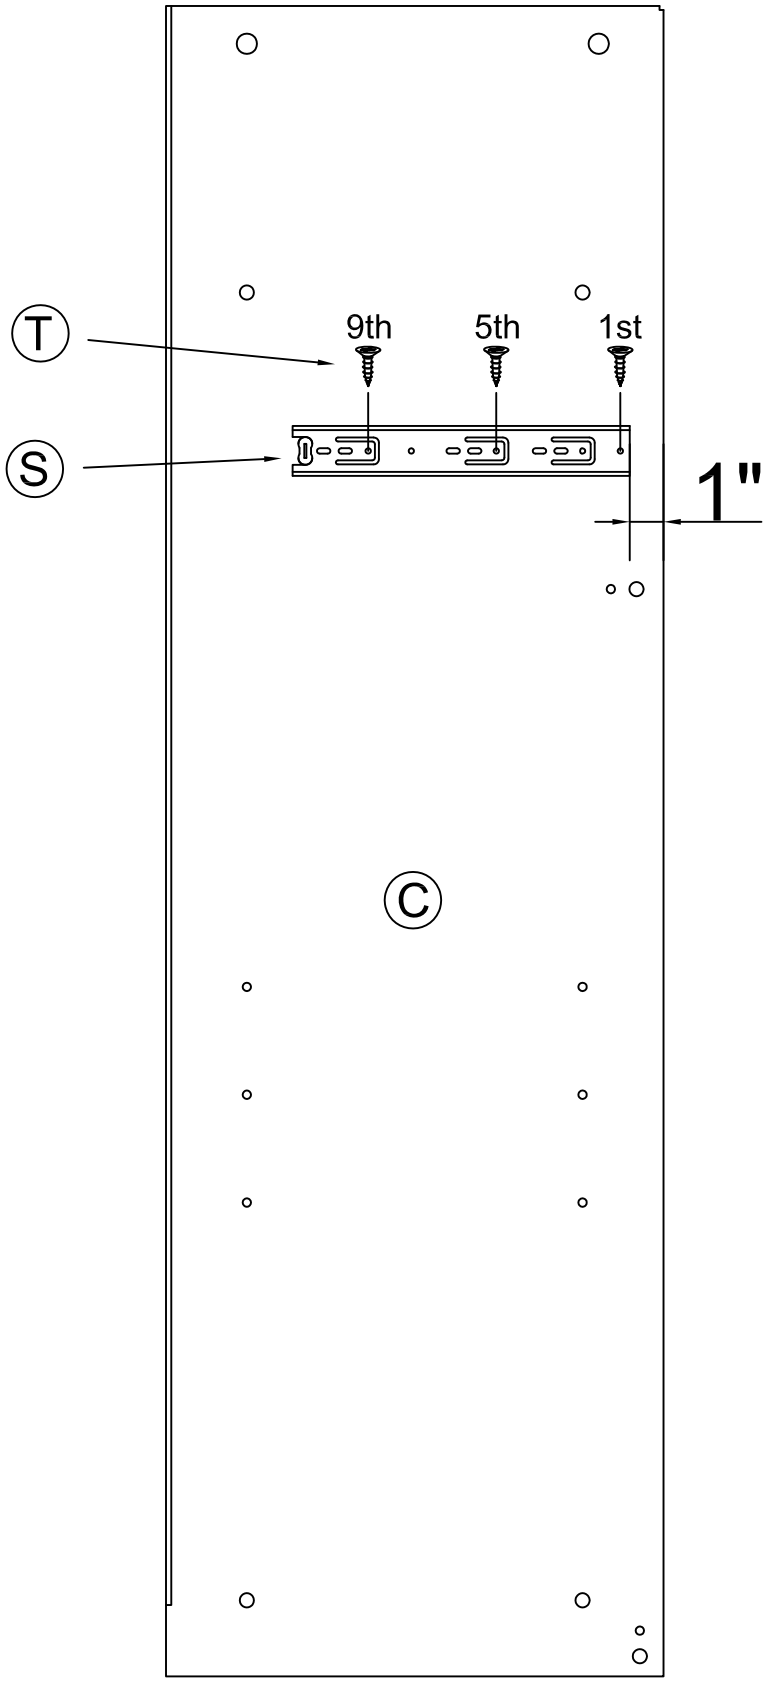

2). ASSEMBLE THE OUTER SLIDE(S).

- ATTACH THE OUTER SLIDE(S) TO RIGHT SIDE PANEL(C) USING 3 SCREWS(T).

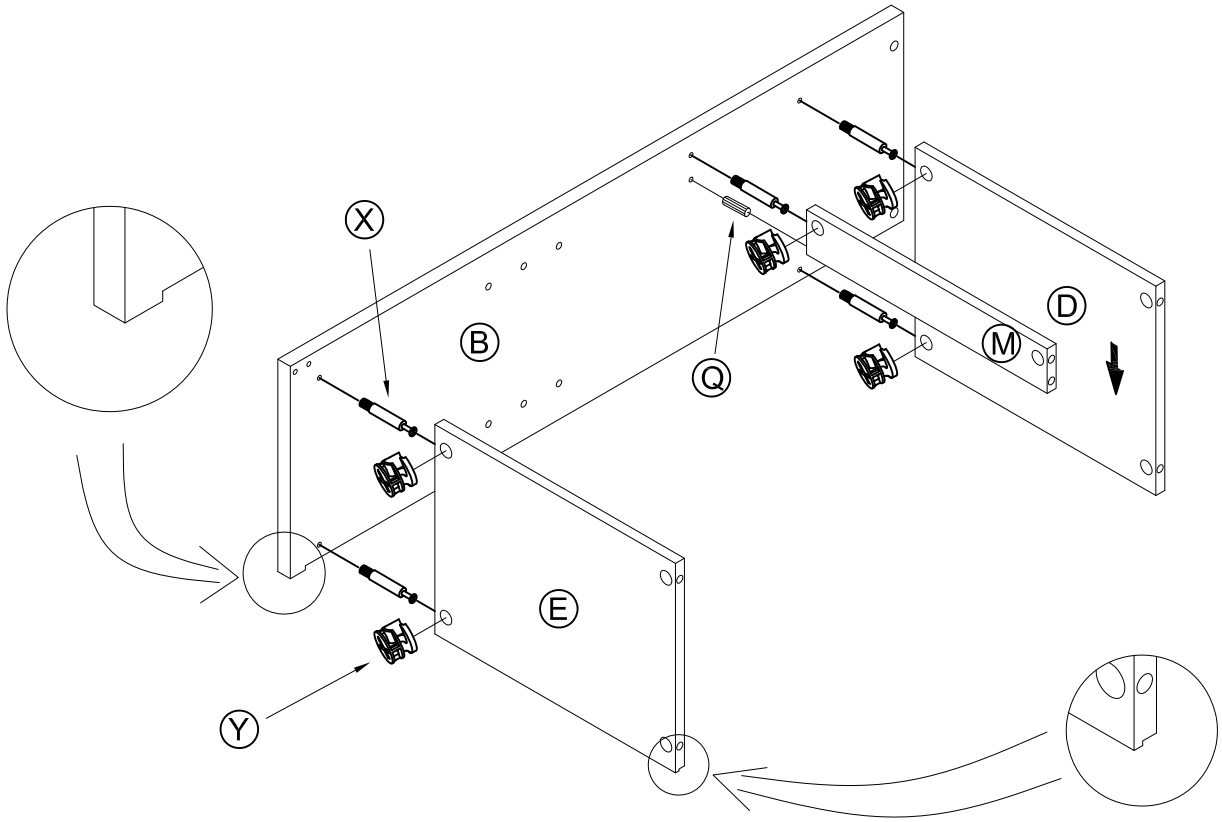

3). ASSEMBLE THE LEFT SIDE PANEL(B).

- ROTATE 5 CAM-BOLTS(X) AND INSERT A DOWEL(Q) INTO THE HOLES IN THE LEFT SIDE PANEL(B).
- PLACE CAM-BOLTS(X) INTO THE HOLES IN THE PANEL(D/E/M) AND ATTACH USING 5 CAM-LOCKS(Y).

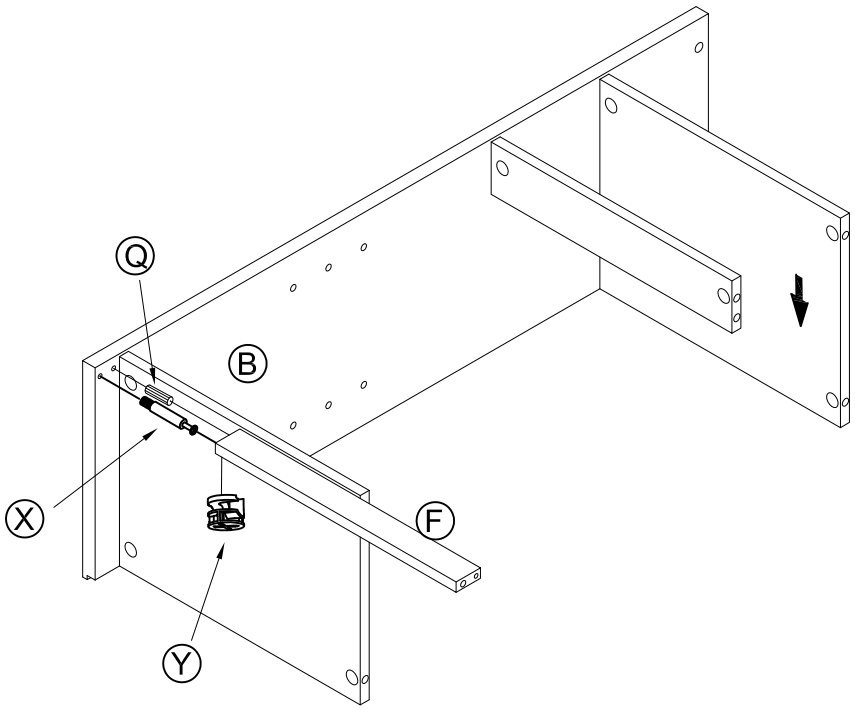

4). ASSEMBLE THE DOWN ADORNING PANEL(F).

- ROTATE A CAM-BOLTS(X) AND INSERT A DOWEL(Q) INTO THE HOLES IN THE LEFT SIDE PANEL(B).
- PLACE CAM-BOLT(X) INTO THE HOLE IN THE PANEL(F) AND ATTACH USING A CAM-LOCK(Y).

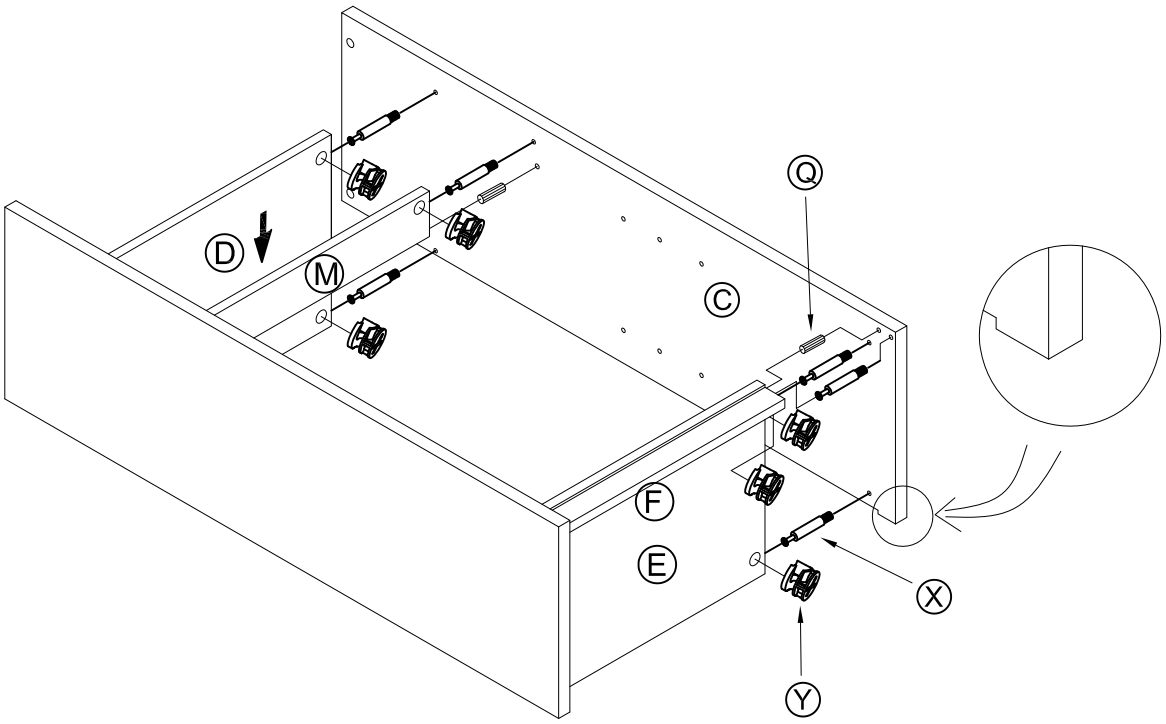

5). ASSEMBLE THE RIGHT SIDE PANEL(C).

- ROTATE THE 6 CAM-BOLTS(X) AND INSERT 2 DOWELS(Q) INTO THE HOLES IN THE RIGHT SIDE PANEL(C).
- PLACE THE CAM-BOLTS(X) INTO THE HOLES IN THE PANEL(D/E/F/M) AND ATTACH USING 6 CAM-LOCKS(Y).

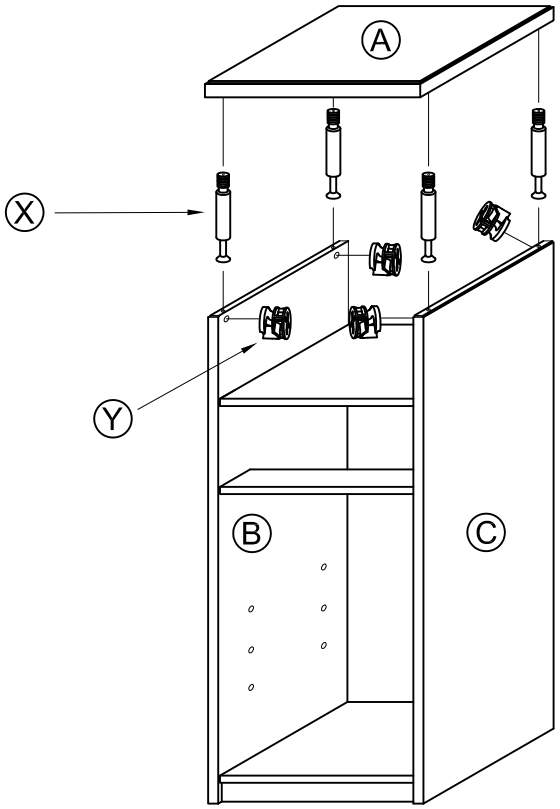

6). ASSEMBLE THE TOP PANEL(A).

- ROTATE THE 4 CAM-BOLTS(X) INTO THE HOLES IN THE TOP PANEL(A).
- PLACE THE CAM-BOLTS(X) INTO THE HOLES IN THE PANEL(B/C) AND ATTACH USING 4 CAM-LOCKS(Y).

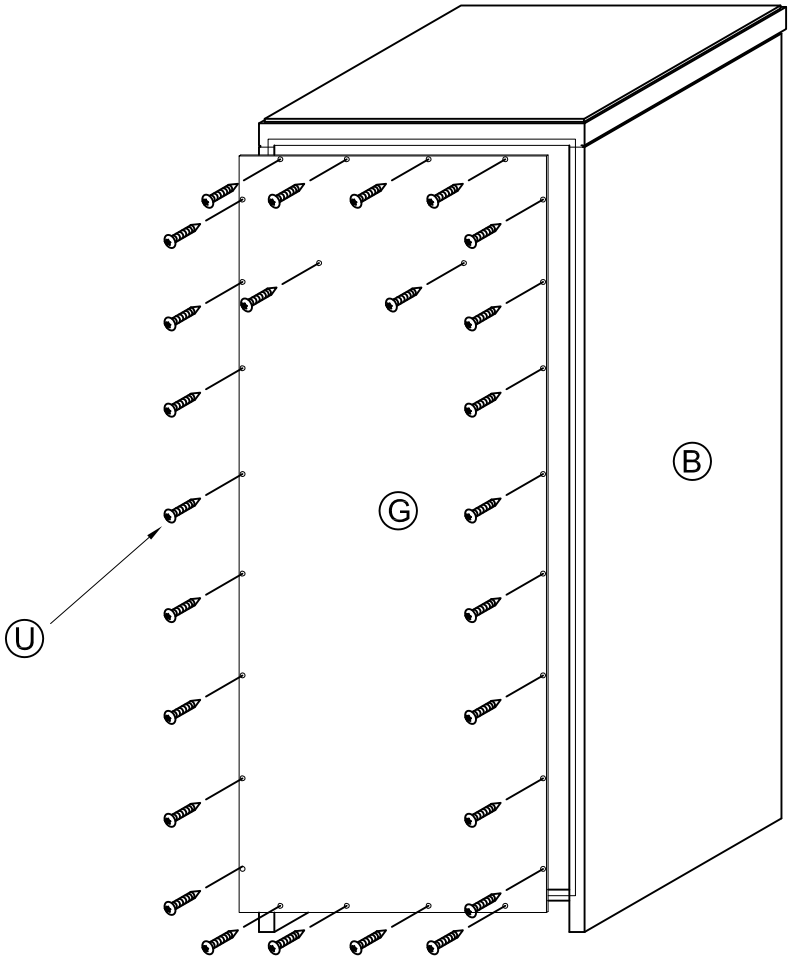

7). ASSEMBLE THE BACK PANEL(G).

- ATTACH THE BACK PANEL(G) USING 26 SCREWS(U).

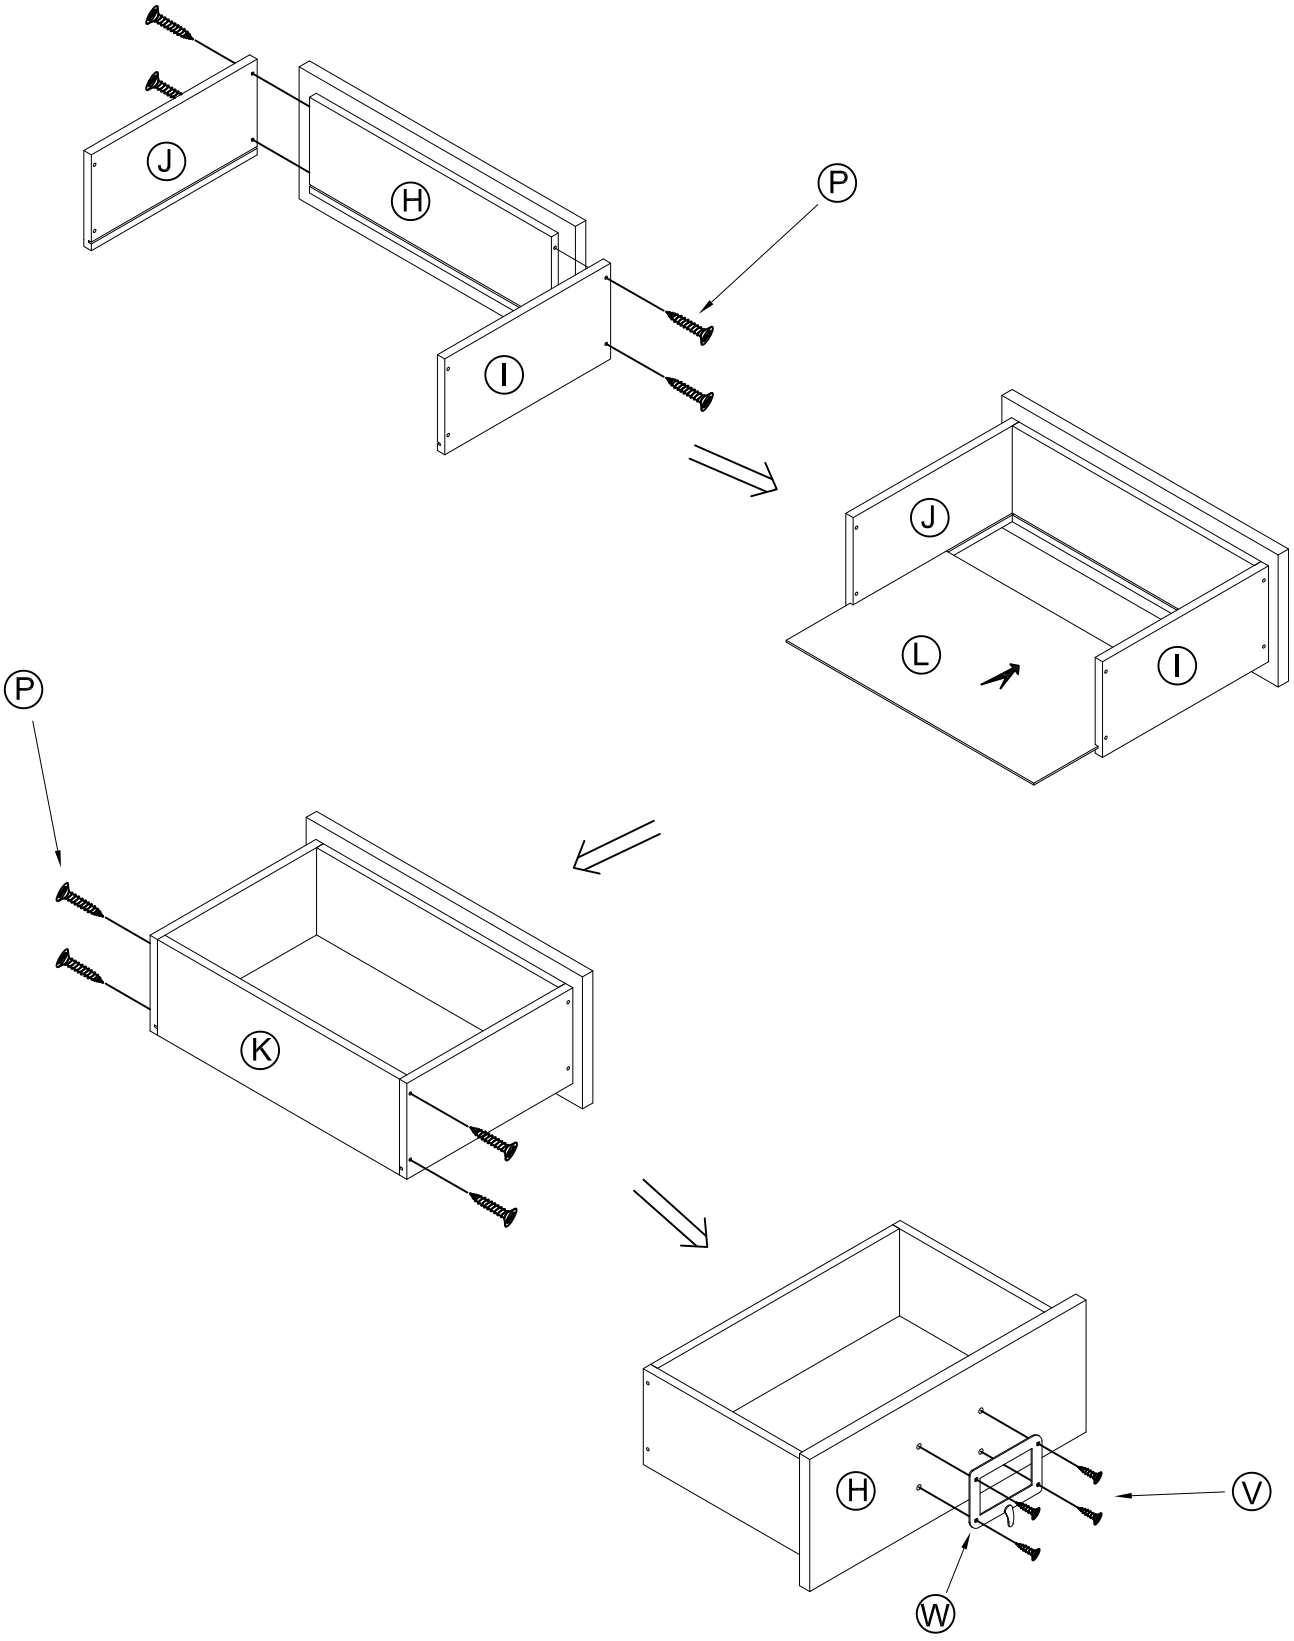

8). ASSEMBLE THE DRAWER.

- ATTACH DRAWER PANEL SIDE(I /J) USING 4 SCREWS(P).
- INSERT THE DRAWER PANEL BOTTOM(L) INTO THE SLOTS IN THE DRAWER PANEL SIDES(I /J).
- ATTACH DRAWER PANEL BACK(K) BETWEEN DRAWER PANEL SIDES(I /J) USING 4 SCREWS(P).
- ATTACH A HANDLE(W) TO DRAWER PANEL FRONT(H) USING 4 SCREWS(V).

ARROW FACES DRAWER FRONT

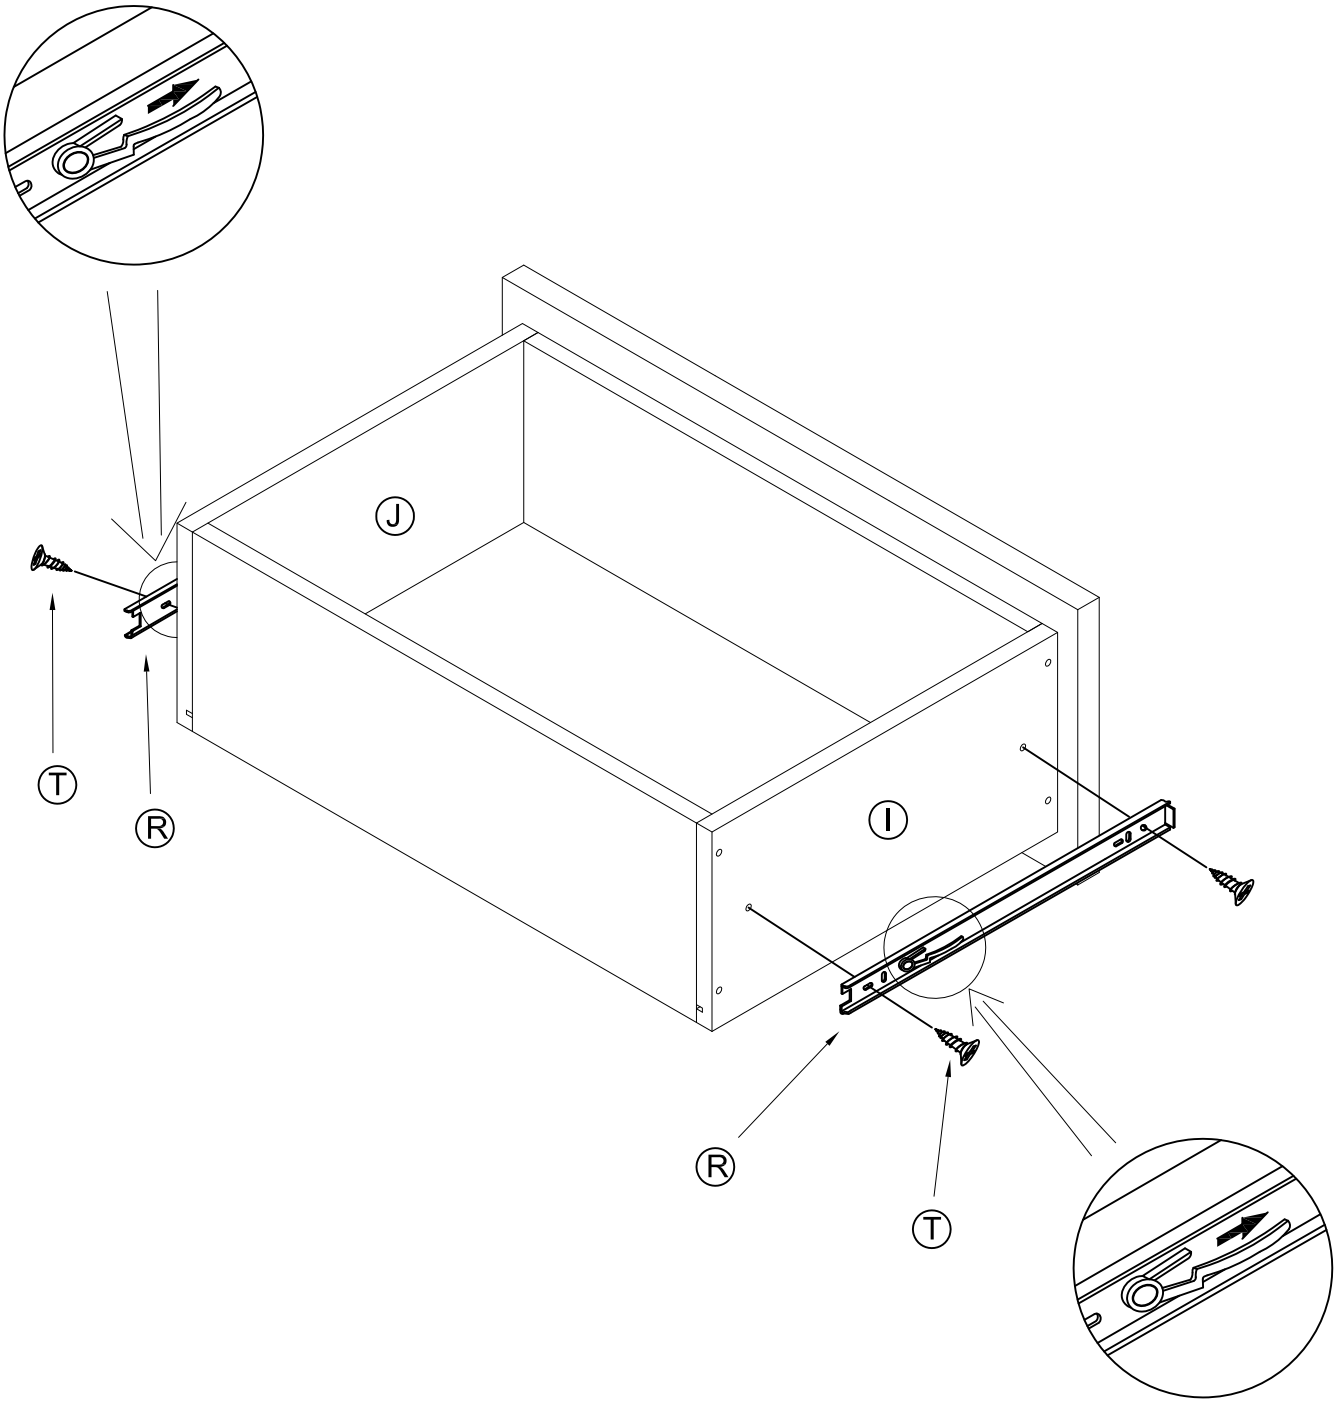

9). ASSEMBLE THE INNER SLIDES(R).

- ATTACH THE INNER SLIDES(R) TO DRAWER PANEL SIDE(I /J) USING 4 SCREWS(T).

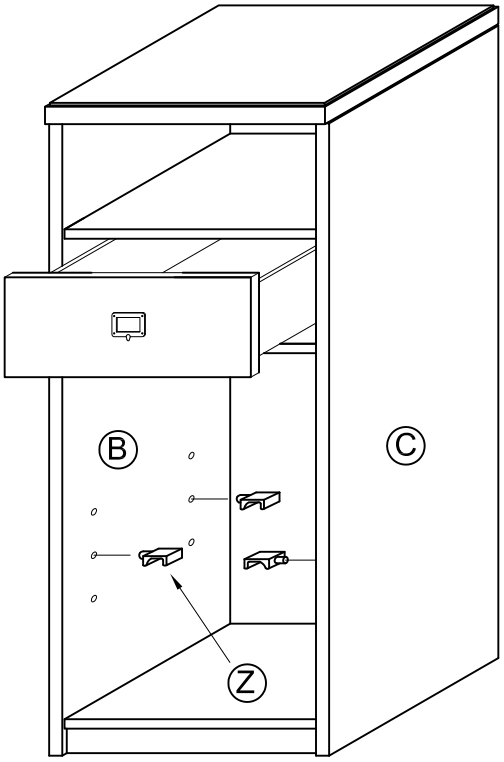

10). ASSEMBLE THE DRAWER AND SHELF SUPPORTS(Z).

- INSERT THE DRAWER INTO THE SLIDERS.
- INSERT 4 SHELF SUPPORTS INTO THE HOLES IN THE SIDE PANEL(B/C).

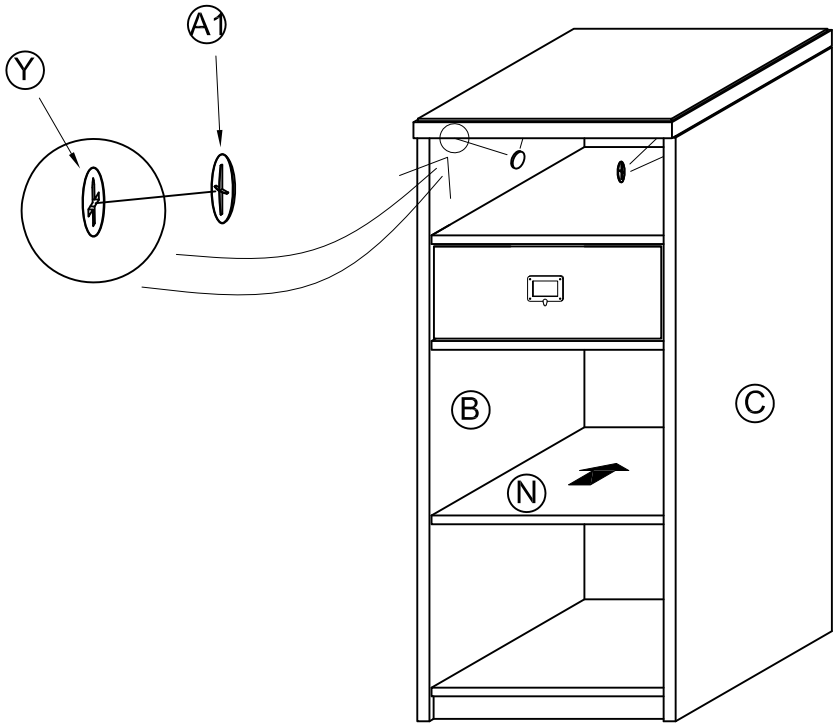

11). ASSEMBLE THE CAM-LOCK CAPS(A1) AND SHELF(N).

- ATTACH 4 CAM-LOCK CAPS(A1) TO THE 4 CAM-LOCKS(Y).
- PLACE THE SHELF(N) ONTO THE SHELF SUPPORTS(Z).

Warning

The anti-tip hardware must be used as part of assembly!

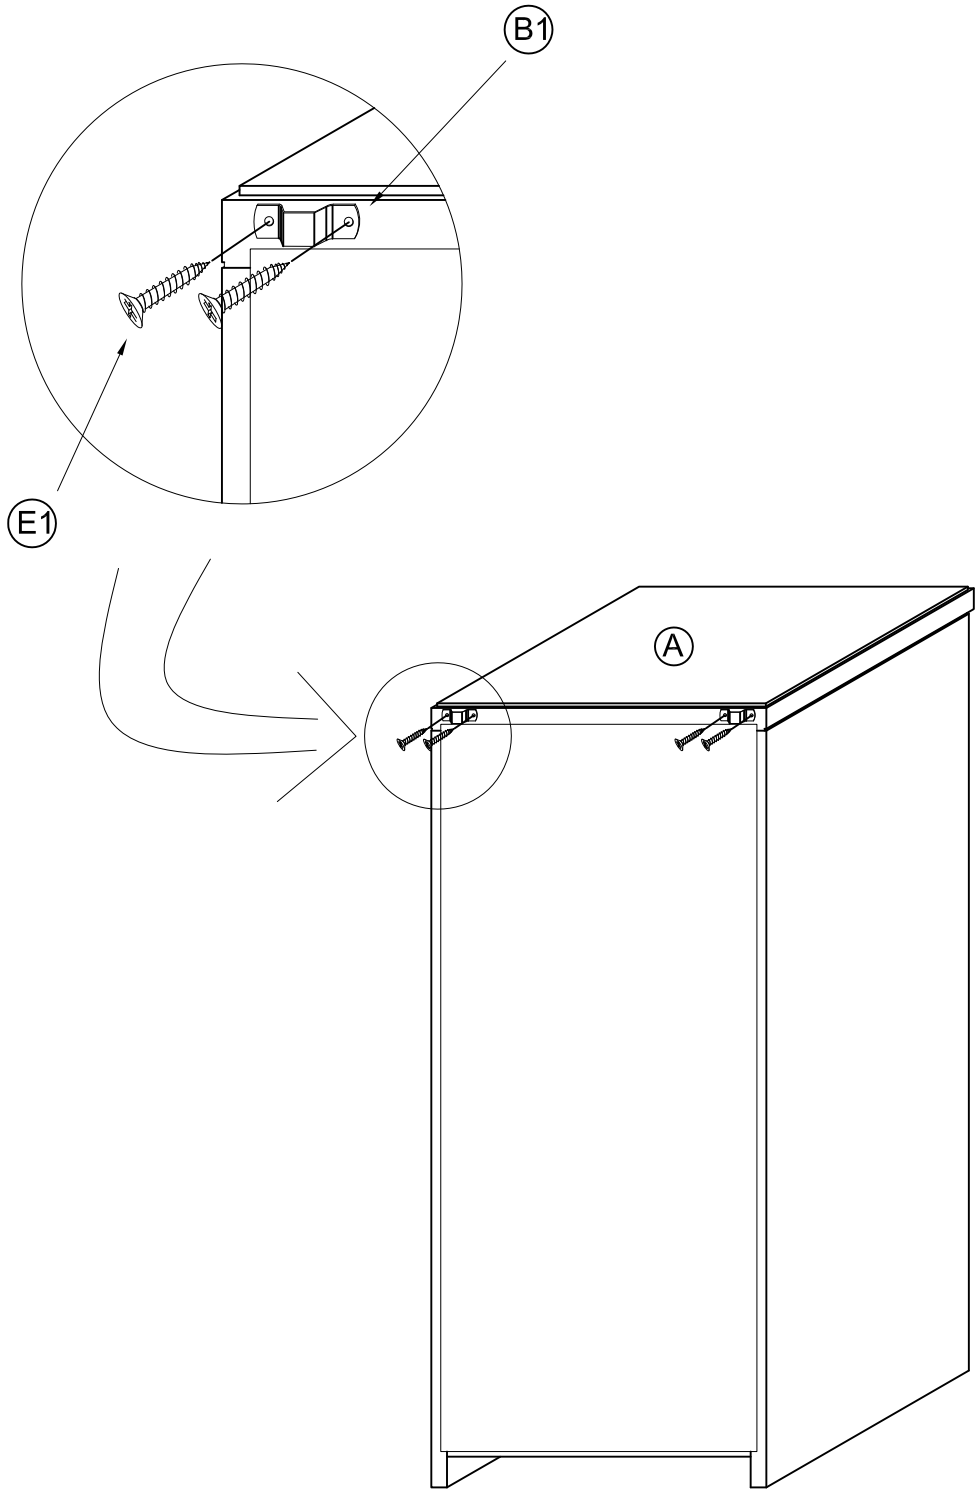

12). ASSEMBLE THE HOOKS(B1).

- ATTACH 2 HOOKS(B1) USING 4 SCREWS(E1) IN THE PREDRILLED HOLES OF REAR TOP PANEL(A).

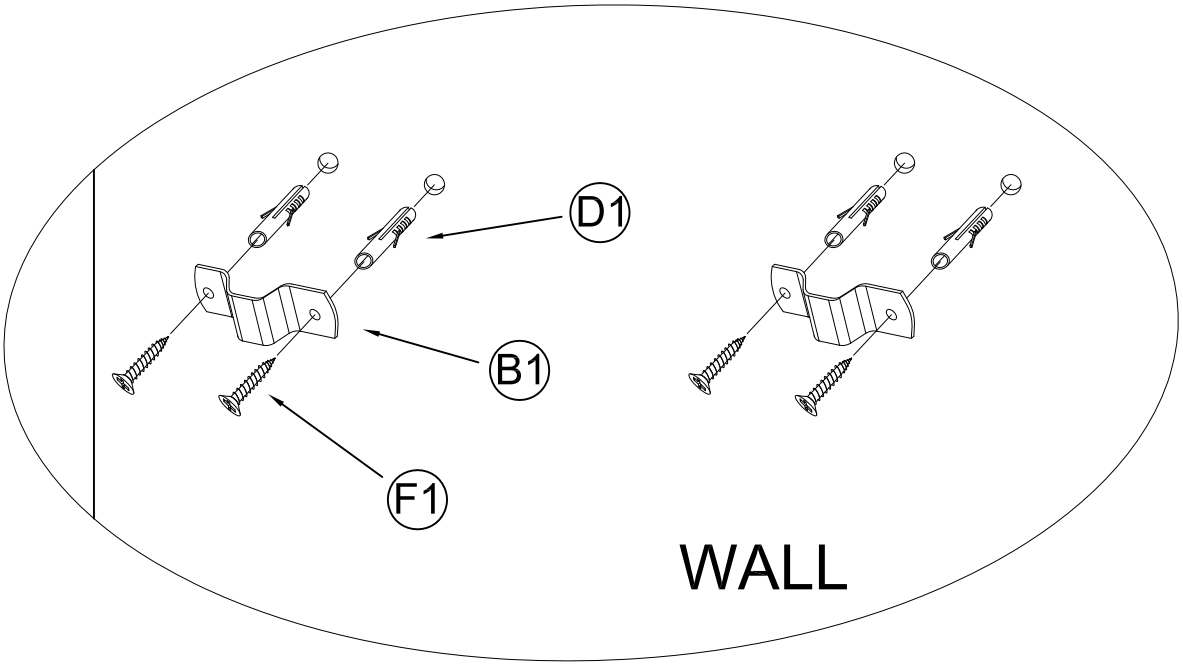

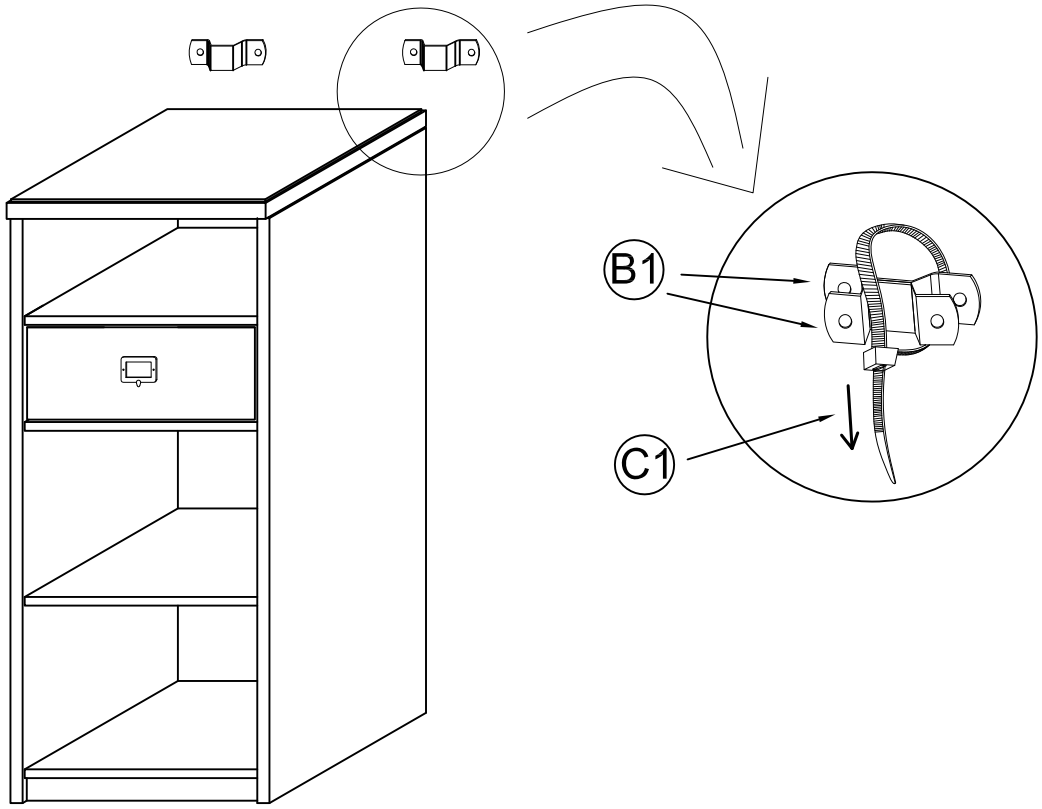

13). ASSEMBLE THE ANTI-TIP HARDWARE.

- DRILL 4 HOLES INTO THE WALL, PLEASE REFER TO THE REAR TOP PANEL'S HOLE DISTANCE AND HEIGHT.
- PUT 4 GECKOS(D1) INTO THE HOLES IN THE WALL AND ROTATE 4 SCREWS(F1) INTO THE GECKOS(D1).
- CONNECT THE TWO HOOKS WITH A PLASTIC BELT.